

1/10th 4WD Nitro Power R/C Short Course Truck

Specifications:

LENGTH	WIDTH	HEIGHT	WHEEL BASE	DRIVE SYSTEM	GROUND CLEARANCE	DIAMETER OF WHEEL	WIDTH OF WHEEL	GEAR RATIO	SERVO
460mm	250mm	160mm	275mm	4WD Shaft Drive	27mm	87mm	40mm	1:5.84(L) 1:8.58(H)	3kg

Spare Part

 
06056-Chassis	06051-Front Upper Arm(L/R)	06052-Front Lower Arm	06053-Rear Lower Arm	15505-Rear Anti-Squat Plate
06055-Front Upper Arm Holder	06062-Shock Absorber	06058-Front Shock Tower	06059-Rear Shock Tower	37010-Post Mount
37011-Body Post	17021-Front Bumper Set/Cap Head Machine Screw 3*30	15504-Rear Bumper Set	06043-Steering Hub (Left/Right)	06044-Rear Wheel Hub Carrier (Left/Right)
06045-Front Gear Box Housing	06046-Rear Gear Box Housing	06063-Front Gear Box Complete	06064-Rear Gear Box Complete	02173-Suspension Arm Pad
02074-Steering Ackerman Joint	02075-Steering Arm Complete B	02025-Steering A	02110-Radio Tray	02046-Radio Tray Post A
02047-Radio Tray Post B	02006-Front/Rear Throttle Mount	06034-Centre Diff. Complete	06102-Wheel Rims (F/R)	15501-Tires(F/R)+Insert Sponge

Spare Part

15502-Wheels Complete (F/R)	08064-Wheel Axle	08065-Wheel Hex.	08027-Pin 2*10mm	02070-Battery Compartment
02111-Battery Cover	02072-Servo Arm	03027-Charger/Battery Wire Connector	06016-Front/Rear Link & Steering Servo Link	02024-Diff. Main Gear Complete
02029-Crown Gear (38T)	02030-Drive Gear	02066-Diff. Pinions+ Pin	06232-Spur Gear(47T)	06033-Spur Gear(42T)
02068-Engine Flywheel	02023-Clutch Bell (Double Gear)	02032-Universal Joint Cup C	02034-Universal Joint Cup A/Grub Hex. Screw 4*4	02016-Universal Joint Cup B/Set Screws 4*4
02003-Rear Dogbone /Centre Dog bone Hole Track:55mm Total Length:61mm	06006-Front Dogbone 76mm	06061-Dogbone(F/R) 84mm	02036-3*44mm Front Suspension Arm Pin A	02063-3*54mm Rear Suspension Arm Pin A
06060-Front Lower Suspension Arm Round Pin B Φ3*39mm	02004-Fuel Tank	02058-Fuel Tube	02172-Exhaust Pipe Tubing	02026-Exhaust Pipe
02028-Air Filter W/Sponge	02031-Exhaust Manifold	02048-Clutch Shoe(w/ Spring) 02048(M) 02048(F)	02049-Engine Holder W/Column Head Screws M3*10	02011-Handle

Upgradable Optionals

102009-Aluminum Exhaust Pipe	122240-Aluminum Ackerman Plate	122042-Aluminum Wheel Hex Mount	122048-Aluminum Locknut M3	122049-Aluminum Locknut M4
122203-Aluminum Radio Tray Mount/Post+Cap Head Machine Screw 3*10*4P+3*8*4P+Flat Head Machine Screw 3*10*4P	122205-Aluminum Engine Mount	122206-Aluminum Lightweight Flywheel	122225-AL. Centre Diff. Mount+Posts/Flat Head Machine Screw 3*10*8P	122227-Aluminum Suspension Arm Reinforcement Bracket
122234-Aluminum Rear Anti-Squat Plate/Flat Head Machine Screw 3*10*2P	122257-Alum. Steering Servo Saver Complete	122259-Aluminum Fuel Tank Cover+Cap Head Machine Screw 2P	122273-Aluminum Clutch Shoe	122275-AL. Gear Box/Flat Head Machine Screw 3*10*4P/ Cap Head Machine Screw 3*15*2P+3*10*2P/ Round Head Machine Screw 3*12*2P
166015-Universal Drive Joint	166004-Aluminum Shock Absorber	166611-Aluminum Steering Hubs(L/R)+Ball Head Nut	166612-Aluminum Rear Hub Carrier (L/R)+Ball Head Nut 4P	166617-Aluminum Front/Rear & Servo Link/Flat Head Machine Screw 3*14*4P/Nut M3*4P
166618-Aluminum Front Upper Arm/M5 Ball Head Screw 2P	166619-AL. Front Lower Arm/Cap Head Machine Screw 3*14*2P/Grub Screw 4*6*2P/M5 Ball Head Screw 2P	166621-AL. Rear Lower Arm/Cap Head Machine Screw 3*14*2P/Grub Screw 4*6*2P/M5 Ball Head Screw 4P	166622-Aluminum Front Shock Tower	166623-Aluminum Rear Shock Tower
166664-Aluminum Battery Cover	188865-Aluminum Fuel Tank/Radio Tray	188831-Aluminum Front Upper Arm Mount+Cap Head Machine Screw 4P	02031A-Polished Aluminum Manifold+ Pad	02156-Aluminum Fuel Filter
04104-Alum.Capped Air Filter Cover Optional Use	80237-Anodized Aluminum Servo Arms			

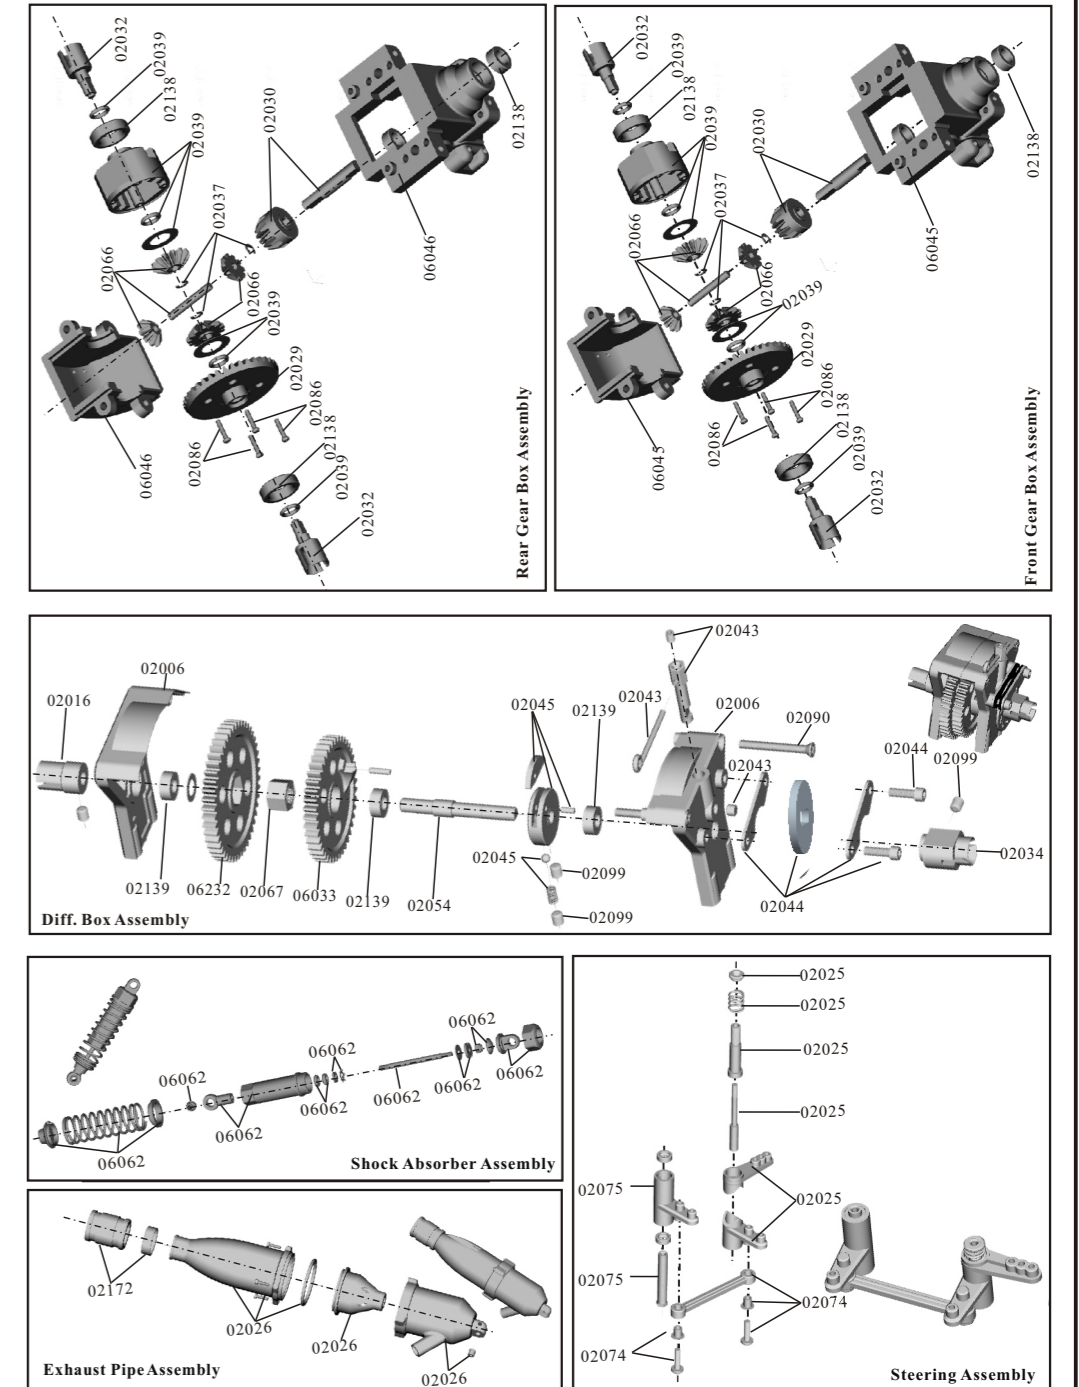


Spare Part

02174-Throttle/Brake Assembly	02059-Exhaust Pipe Holder w/Cap Screw & Nut	02044-Disc Brake	02039-Differential Box+Seals+Washers	02043-Brake Cam
02045-Two Way Drive Clutch	02054-Centre Gear Shaft	02067-Hex. Bearing	16602-Switch	02065-Flywheel Pilot Post
02155-Chargeable Battery Pack (6V 1100mA)	02171-Sway Arm Adjuster	02153-Ball Head Nut	02152-M5 Ball Head Screw	02038-Ball Head Screw
06023-Shock Ball Stud B	06007-Shock Ball Head C	02164-Ball Head Cap	02101-Steering Bushing	02102-Nylon Nut M3
02055-Nylon Nut M4	02037-E-Clip (Φ7.4 Φ2.5 Φ2.3)	02057-Antenna Pipe	02053-Body Clip	02103-Zip Tie
02078-O-Ring	02138-Ball Bearing Φ15*Φ10*4	02139-Ball Bearing Φ10*Φ5*4	02079-Oil Bearing Φ15*Φ10*4	02080-Oil Bearing Φ5*Φ10*4
02501-Washer 8*5.2*0.5	02098-M3*4 Grub Hex. Screw	02099-Grub Hex. Screw M4*4	61018-Grub Hex. Screw M4*10	08024-Discal Screw M3*11
02181-Cap Head Self-Tapping Screw 3*15 10P	02083-Cap Head Self-Tapping Screw 3*12 6P	02081-Cap Head Self-Tapping Screw 3*8 6P	02082-Cap Head Self-Tapping Screw 3*10 10P	02084-TT3*20 BH Screw 4P

Spare Part

02176-3*12 Cap Head Machine Screw 4P	02096-3*10 Cap Head Machine Screw 6P	18243-3*8 Cap Head Machine Screw 10P	02097-3*14 Cap Head Machine Screw 6P	10392-3*30 Cap Head Machine Screw 4P
02085-Round Head Self-Tapping Screw 2*8	02086-Round Head Self-Tapping Screw 2*10 10P	02194-BT2.6*12 BH Screw 4P	01083-Round Head Machine Screw 3*11 6P	81220-5-Countersunk Cross Head Machine Screw 3*14 4P
02087-Countersunk Cross Head Self-Tapping Screw 3*10 15P	02088-Countersunk Cross Head Self-Tapping Screw 3*14 13P	02090-TPE3*25FH Screw 4P	02092-ISO 3*10 Screw 8P	02093-M3*10 Column Head Hex. Screw 10P
02095-M3*8 Column Head Hex. Screw 4P	02094-M3*30 Column Head Hex. Screw 4P	02060-Engine 16CXP/18CXP	02200-New Engine 18CXP/20CXP	11016-Pull Starter For 02200 Only

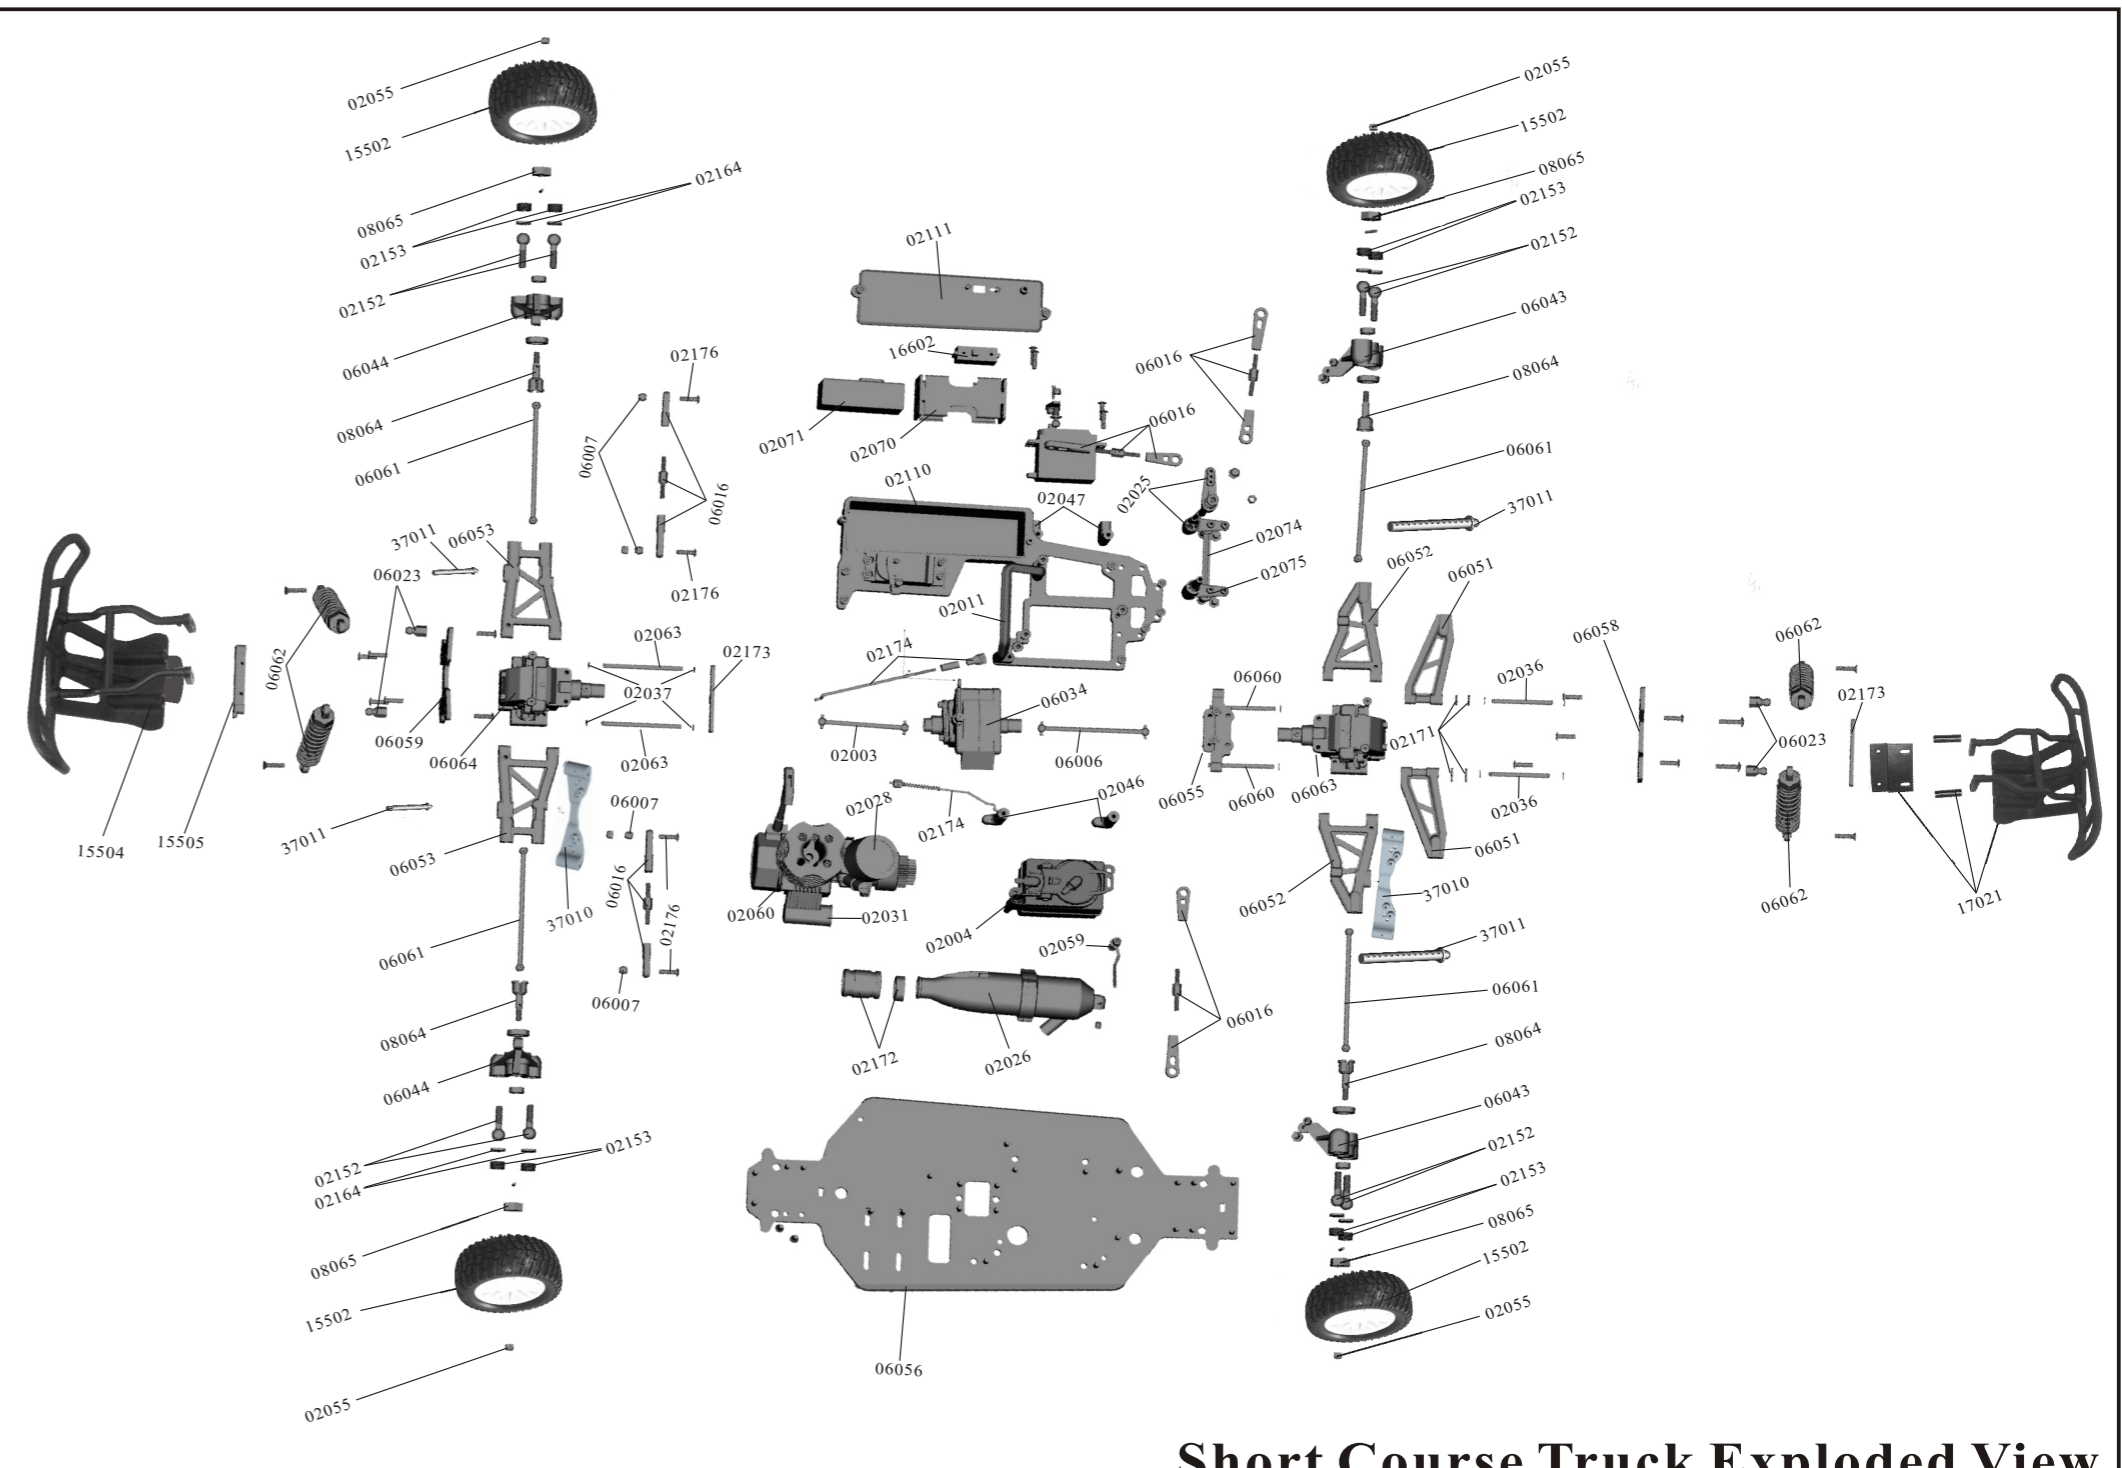 

Short Course Truck Exploded View