MODEL: BACKDRAFT 3.5





MAN-BACKDRAFT35-2016.3.08
•To ensure that you are using the most recent version of this manual: www.redcatracing.com/manuals/Backdraft35manual.pdf
•To ensure that you have the most recent version of the Nitro Vehicles Manual: www.redcatracing.com/manuals/NITRO-MANUAL.pdf

### **WARNING!**

### READ ALL INSTRUCTIONS INCLUDED WITH VEHICLE BEFORE OPERATING



### **AGE WARNING!**

This radio controlled (RC) vehicle is not a toy! You must be 14 years of age or older to operate this vehicle. Adult supervision is required.



### **RISK OF RUNAWAY VEHICLE OR INJURY!**

Never start the engine without first having the controller and receiver turned on, and having tested the controls to make sure everything is functioning properly.



#### **RISK OF FIRE! / RISK OF EXPLOSION!**

There is a risk of fire and explosion when dealing with fuel. Hobby fuels contain Nitromethane and Methyl alcohol which are highly flammable and combustable. Injury or death can occur if proper care is not followed. Follow all precautions that go along with handling nitro fuel and never allow fuel to be near open sparks or flames of any kind. Only use fuel rated containers. Nitro fuel ignites quickly and emits fumes into the air. The entire area around the fuel may have combustible fumes in the air. This means the air around the fuel can flash ignite causing an explosion. Only use outdoors in a well ventilated area.



#### POISONOUS!

Fuels containing Nitromethane and Methyl alcohol and are toxic. Injury or death can occur if swallowed. May irritate skin and cause injury if absorbed into the skin. Injury or death can occur from breathing the toxic fumes. The exhaust emitted from this Radio Control (RC) vehicle's muffler is toxic and can cause injury or death if inhaled. KEEP AWAY FROM CHILDREN AND PETS! Never start the engine indoors, not even in a closed garage. Always follow the appropriate nitro fuel safe handling practices.



### **RISK OF BURNS!**

The engine, exhaust pipe, and other areas of the vehicle get hot. Burns can occur if touched after vehicle operation. Allow adequate time to cool before handling.



### **RISK OF INJURY!**

Hobby grade RC vehicles can cause serious injury or death if not operated correctly. Never use this vehicle in crowds. Never chase people or animals. Drive in safe open areas only. Keep body parts away from moving parts.



#### **RISK OF DAMAGE!**

Never operate RC vehicles on public roads. Damage of vehicle and property can occur. Injury or death may also occur. Only operate on wide open private property.



#### WARNING

Do not mix old and new batteries. Do not mix alkaline, lithium, standard (carbon zinc), or rechargeable (nickel cadmium) batteries. Do not change or charge batteries in a hazardous location.



FCC Compliance Statement! The radio included with your vehicle complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operations. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**WARNING:** While operating the Radio, a separation distance of at least 20 centimeters must be maintained between the radiating antenna and the body of the user or nearby persons in order to meet the FCC RF exposure guidelines.


# FEATURES & SPECIFICATIONS

- Powerful 3.5cc. .21 Nitro Engine
- Large 125cc Fuel Tank
- 4 Wheel Drive
- 2-Speed Transmission
- Aluminum Capped Oil Filled Big Bore Shocks
- · Composite Disc Brake
- · 3.0mm 6061 Aluminum Chassis
- 2.4GHz Radio System


- Scale: 1/8
- · Length: 490mm
- · Width: 305mm
- Height: 190mm
- Wheelbase: 325mm
- · Ground Clearance: 30mm


### **VEHICLE OVERVIEW**

- A: Engine
- B: Tuned Pipe
- C: Pull Starter
- D: Air Filter
- E: Fuel Tank
- F: Receiver Battery
- G: 2.4GHz Receiver
- H: On/Off Switch
- I: Throttle Servo
- J: Disc Brake
- K: Steering Servo
- L: Steering Linkage
- M: Oil Filled Shocks
- N: Carry Handle

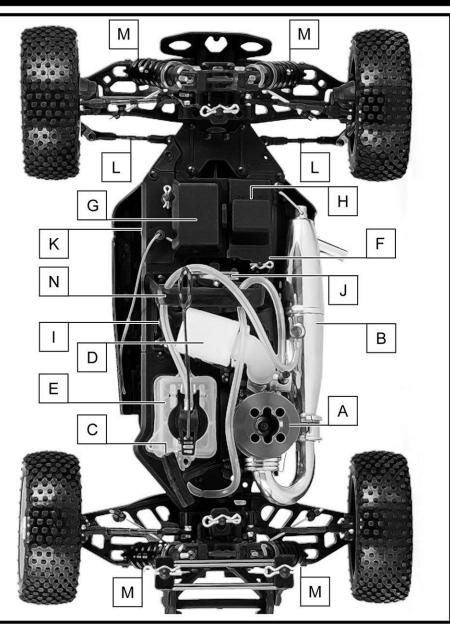

### RADIO GUIDE

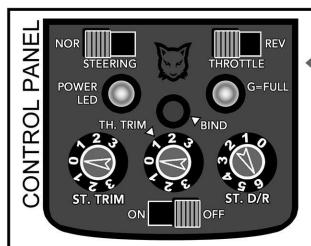

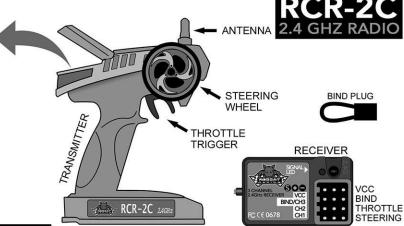

Steering Reverse Switch: Top left switch. Used to change steering orientation. If the car turns right when you steer left, flip this switch.

Throttle Reverse Switch: Top right switch. Used to change throttle trigger orientation. If the car goes in reverse while you pull the throttle trigger, flip this switch.

<u>Power LED:</u> Left LED light. Lights up when the transmitter is turned on.

Battery Level LED: Right LED light. Lights up green when transmitter batteries are full. Flashes when transmitter batteries are low and need replacing.

<u>Bind Button:</u> Used to bind the transmitter to the receiver. See binding instructions.

**Steering Trim:** Left knob. Used to set the steering neutral point. If the vehicle veers in one direction while the steering wheel is centered, turn this knob in the opposite direction until the car drives straight.

Throttle Trim: Middle knob. Used to set the throttle neutral point. If the vehicle moves forward or reverse while the throttle trigger is centered, turn this knob until the vehicle remains still. For maximum setting, turn slowly until the vehicle creeps forward, then turn the knob the opposite direction until the car stops.

Steering Dual Rate: Right knob. Used to limit the amount of steering. 0= little/no steering & 6= maximum steering. Set the knob to the amount of steering you feel comfortable with. If the vehicle has a tendency to spin out, lower the steering rate.

On/Off Switch: Bottom switch. Turns transmitter On and Off.

**VCC:** Used to power the servos and receiver, through a receiver battery.

**BIND/CH3:** Used when binding to transmitter. Used for 3rd channel when needed.

CH2: Used for throttle servo.


**CH1:** Used for steering servo.

### **Binding:**

- 1. Make sure the vehicle On/Off switch is turned OFF and plugged into the VCC port.
- 2. Insert the bind plug into the Bind/Ch3 port.
- 3. Plug a fresh set of receiver batteries into the On/Off switch and power the vehicle on. **Do NOT start the engine!** The receiver light should now begin to blink red.
- 4. Press and hold the BIND button in the center of the transmitter's Control Panel and turn on the radio.
- 5. Release the bind button when you see the green light on the radio flashing. At this point, your receiver's LED should now be solid red. If so, turn off the power to your vehicle, as well as the radio.
- 6. Remove the BIND PLUG from the receiver and reinstall the servos aswell as the receiver battery, according to the paragraph above.
- 7. Now turn your radio and vehicle on as normal. Your radio and receiver should be bound together and communicating with each other.


# PARTS LIST

Item No.Description	Item No.Description
BS702-049 Aluminum Rollcage Beam, Blue 2pcs	BS903-081 Column Head Hex Screw (3*10mm) 6pcs
BS802-002 Body Blue and Black	BS903-082 Diff. Outdrive W/Set Screw
BS802-002C Body Clear W/Decals	BS903-083 Diff Outdrive C W/Set Screw
BS905-001 Rear Susp. Mount Block Support	BS903-084 Receiver Battery Pack 6V NIMH
BS905-006 Tail Wing Black	BS903-086 Bal Bearing (5*10*4) 2pcs
BS905-006W Tail Wing White	BS903-087 Bal Bearing (12*18*4) 2pcs
BS905-009 Rear Anti-roll Bar Set	BS903-088 E-Clip (4*0.6mm) 12pcs
BS933-011 Clutch Bell 15T	BS903-089 Pin (2*10) 12pcs
BS903-003 Shocks Plastic 2pcs	BS903-090 Pin (2*12.5) 12pcs
BS903-004 Shocks Aluminum 2pcs	BS903-091 Washer A (5.2*10*0.2) 12pcs
BS903-005 Shock Tower	BS903-092 Washer B (4.2*8*0.2) 12pcs
BS903-007 Body Pin 1.5mm 6pcs	BS903-094 Double Way Ball End 6pcs
BS903-008 Upper Susp. Arm 2Set	BS903-095 Grub (Set) Screw (M4*4) 6pcs
BS903-009 Front Bumper 1pcs	BS903-096 Grub (Set) Screw (M4*8) 6pcs
BS903-010 Susp. Arm Mount 2pcs	BS903-097 Diff. Gearbox
BS903-011 Upper Susp. Arm Mount Front/Rear	BS903-098 Diff. gearbox Bulkhead Upper/Lower
BS903-014 Ball Bearings (6*12*4) 2pcs	BS903-099 Gearbox Front/Rear
BS903-111 Cast Alum. Steering Knuckle L/R (4mm)	BS903-101 2-Speed Pinion Gear 18T/19T
BS903-016 Ball Bearing (10*15*4) 2pcs	BS903-102 Brake Set for 2-Speed
BS903-017 C Hub L/R W/Screws/Bushings	BS903-103 2-Speed Gear Assembly 40T/37T
BS903-018 Front Lower Susp. Arm L/R 2pcs	BS903-106 Srew Pin (M3*9.5) 12pcs
BS903-019 Drive Shaft Set (4*87.5mm) 2pcs	BS903-107 Antenna Mount 3pcs
BS903-020 Complete Differential and Housing	BS903-108 Receiver Battery Charger (for NIMH RX pack)
BS903-021 Anti-Roll Bar Set	BS904-007 Upper Deck Rear
BS903-023 O-Washer 8pcs	BS904-009 Dogbone Front (3.5*98.3mm)
BS903-024 Front Hinge Pin Short (3*37.5mm) 4pcs	BS904-010 Dogbone Rear (3.5*108.3mm)
BS903-025 Susp. Hinge Pins Long (3*56mm) 4pcs	BS901-050 Body Clip (1.0) 12pcs
BS903-026 Front Chassis Plate	BS901-067 Antenna Pipe W/Cap For 2.4GHz 3pcs
BS903-028 Lower Susp. Mount Block Front/Rear	BS903-004 Aluminum Shock 2pcs
BS903-029 Anti-Roll Bar Linkage Set 1pcs	BS902-051 B-Head Cross Screw (BT3*10) 12pcs
BS903-030 Steering Linkage 2Sets	RCR-2CNR 2.4GHz Transmitter
BS903-030 Steering Linkage 23ets BS903-031 Servo Saver Unit	28479 2.4GHz 2ch Receiver Splashproof
BS903-032 Upper Deck Front	HX-3CP 3KG Servo
BS903-033 Battery Case	BS936-001 Tire/Wheel Set Black 2pcs
BS903-034 On/Off Switch	BS936-001W Tire/Wheel Set White 2pcs
BS903-035 Receiver/Battery Case Cover	BS936-002 17mm Wheel Nut
BS903-036 Handle 1pcs	BS936-003 17mm Wheel Hub
BS903-037 Steering Servo Horn/Linkage	BS936-004 Front/Rear Stub Axle
BS903-038 Steering Servo Mount A/B	BS801-001 Chassis Alum. 1pcs
BS903-039 Upper Deck Center	BS801-002 .21 Nitro Engine
BS903-040 Upper Deck Mount 2pcs	BS801-003 Engine Mount Plate W/Screws
BS903-043 Side Guard Plate L/R	BS801-004 Engine Crankshaft Nut W/E-Clip
BS903-044 Throttle Servo Mount A/B	BS801-005 Engine Mount L/R
BS903-045 Throttle Servo Horn and Linkage Set	BS801-006 Engine Flywheel W/Pin
BS903-048 Throttle Linkage Set	BS801-007 Metal Exhaust Pipe
BS903-052 Clutch Shoes W/Spring Aluminum	BS801-009 Alum. Exhaust Linkage
BS903-058 Hub Carrier Rear	BS801-010 Air Filter W/Insert
BS903-059 Rear Lower Susp. Arms L/R	BS801-011 ISO4*10 Flat Cross Screw W/Washer 4Set
BS903-060 Fuel Tubing and Mount	BS801-012 Complete Gearbox Assembly
BS903-061 Rear Susp. Arm Pin Short (3*34.5mm)	BS801-013 Slipper Clutch Assembly
BS903-065 Flat Cross Screw (TPF2.6*10) 12pcs	BS801-014 Spur Gear 43T
BS903-066 TPF3*8mm 12pcs	BS801-015 Exhaust Manifold
BS903-067 TPF3*10mm 12pcs	BS801-016 Fuel Tank Unit
BS903-068 Flat Cross Screw (TPF3*14) 12pcs	BS801-019 Air Filter Unit W/Insert
BS903-069 Flat Cross Screw (TPF3*16) 12pcs	BS701-031 Tail Wing Mount
BS903-070 Flat Cross Screw (ISO3*10) 12pcs	BS701-032 Rollcage Post Set
BS903-071 B-Head Screw (BT2.6*6) 12pcs	BS701-033 Body Post Front
BS903-072 B-Head Screw (BT3*8) 12pcs	BS701-034 Body Post Rear
BS903-073 B-Head Screw (BT3*12) 12pcs	
BS903-074 B-Head Cross Screw (3*14mm) 12pcs	
BS903-075 B-Head Cross Screw (BT3*16) 12pcs	
BS903-076 B-Head Cross Screw (BT3*20) 12pcs	

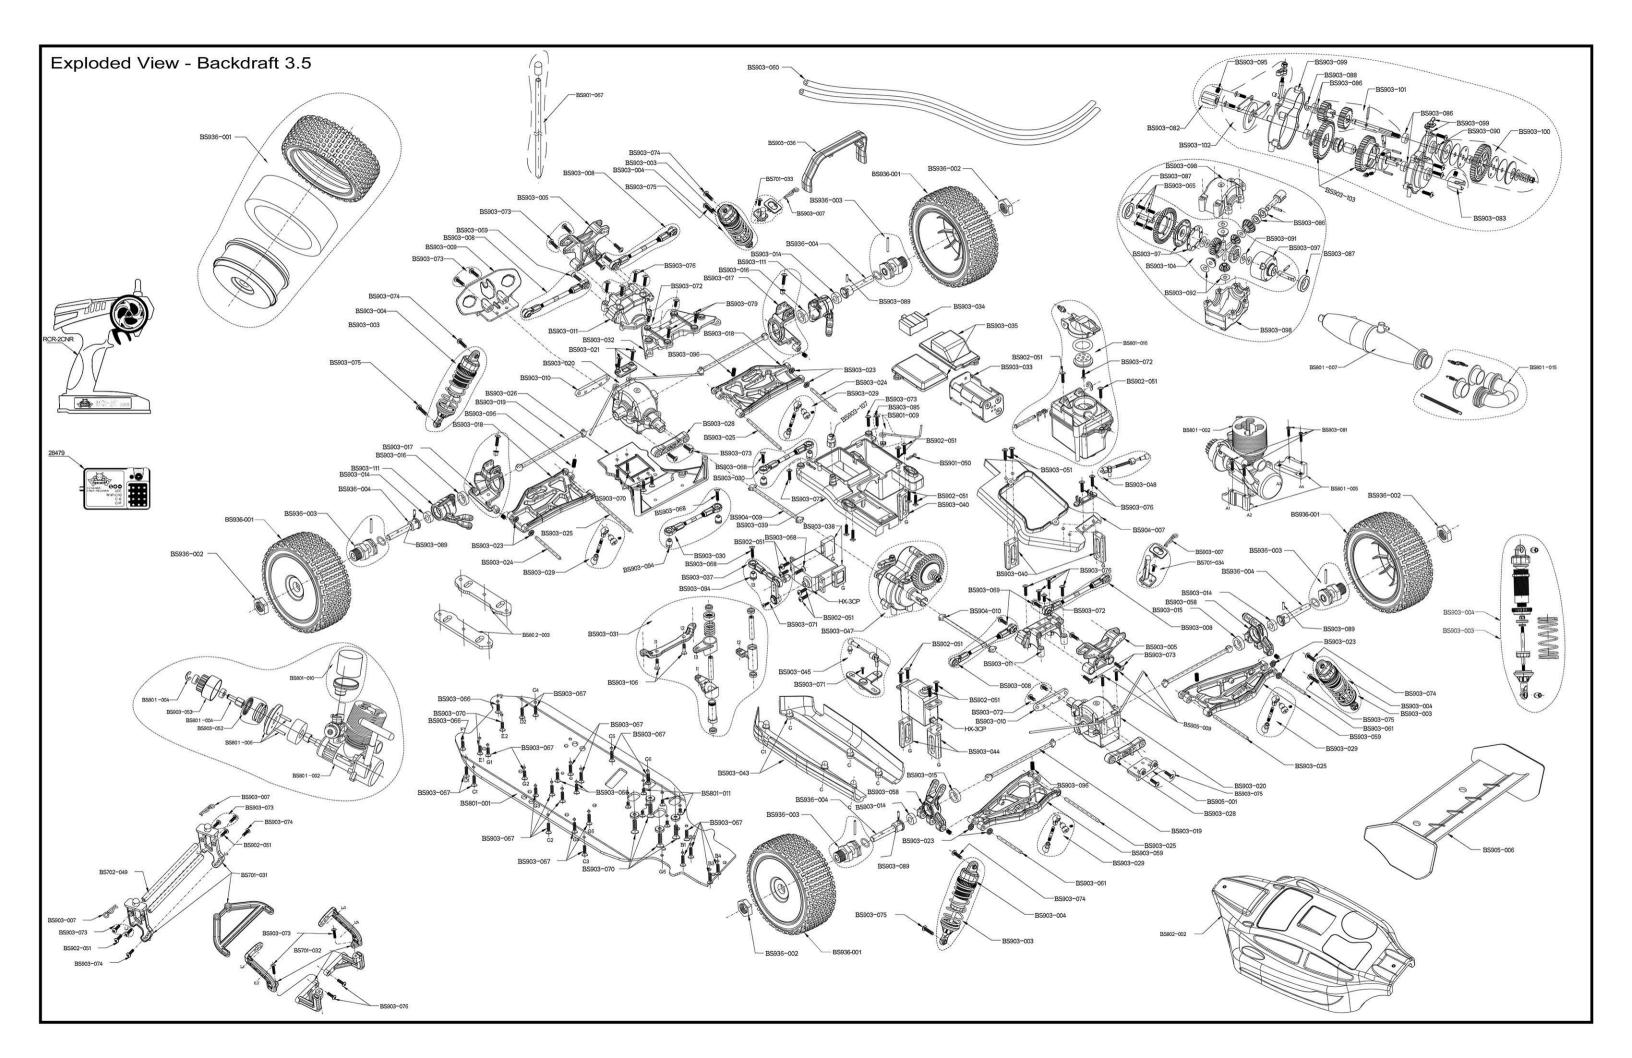






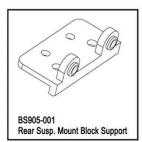






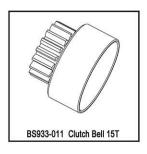






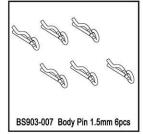



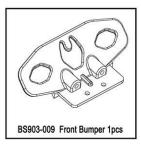











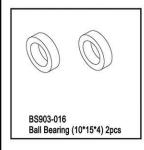







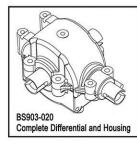












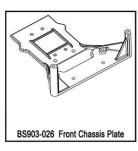


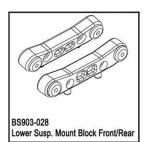






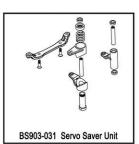

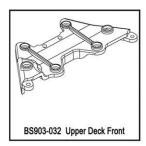




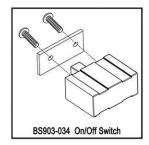










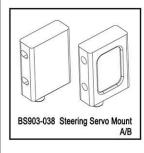


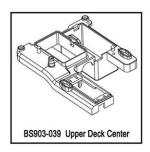



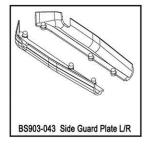

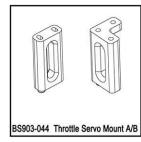

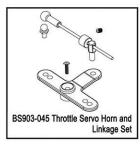












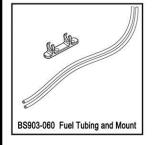




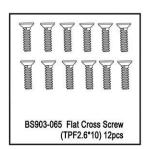




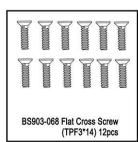



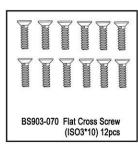

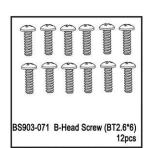










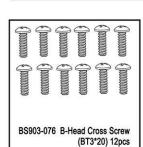

























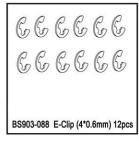


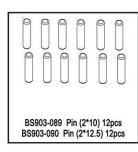


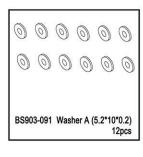

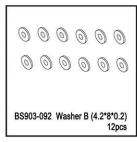



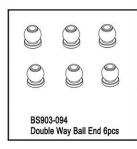

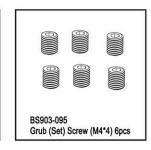












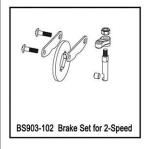






















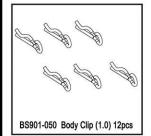



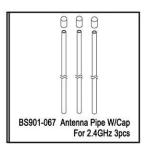



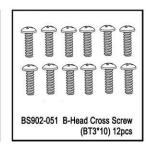



















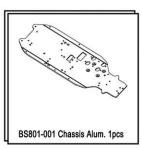


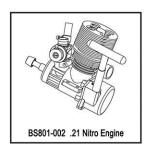

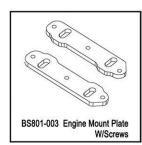



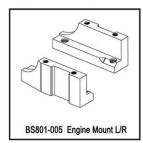


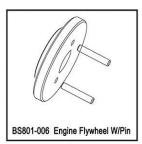







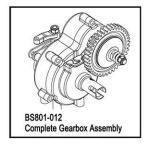

































FAST & AFFORDABLE & FUN

www.redcatracing.com

MAN-BACKDRAFT35-2016.3.08
•To ensure that you are using the most recent version of this manual: www.redcatracing.com/manuals/Backdraft35manual.pdf

•To ensure that you have the most recent version of the Nitro Vehicles Manual: www.redcatracing.com/manuals/NITRO-MANUAL.pdf